


CERRUTI 1881

T I M E P I E C E S

VD33/VD34
INSTRUCTION MANUAL

DISPLAY AND CROWN / BUTTON OPERATION

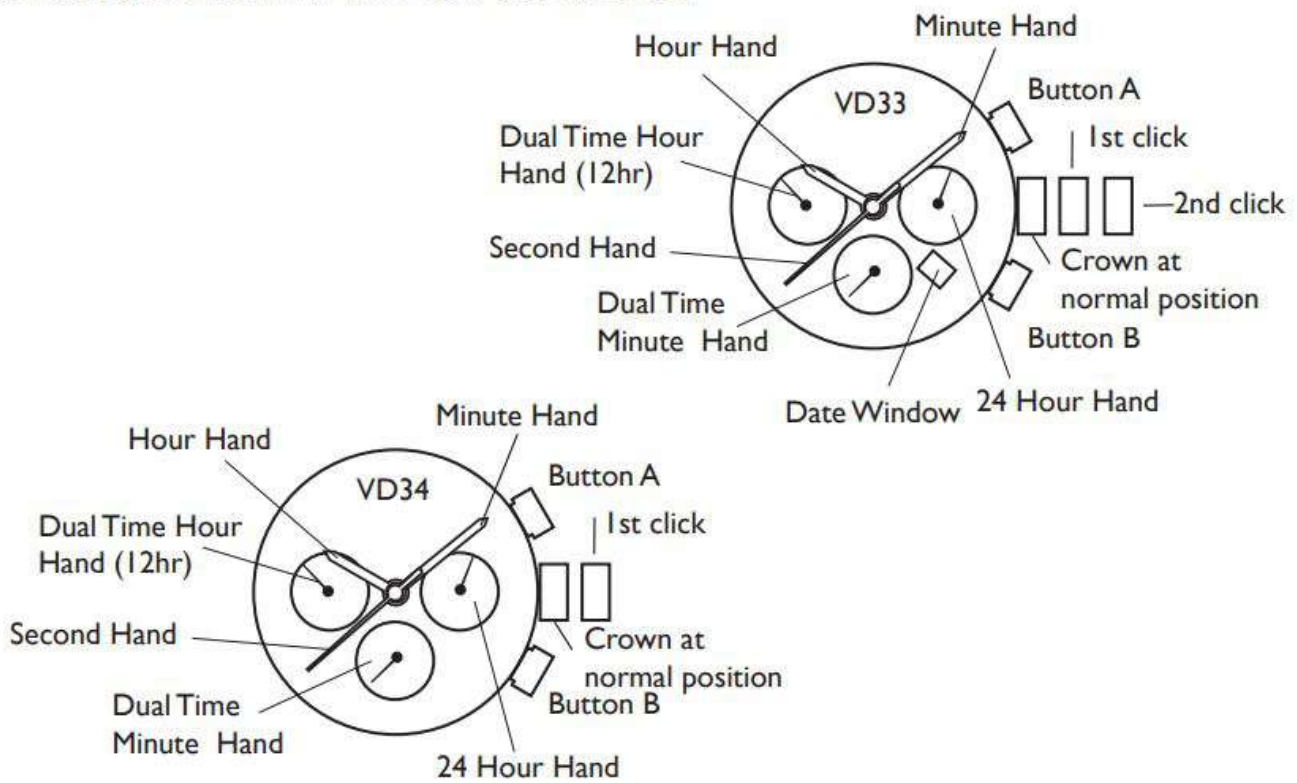

ADJUSTING DUAL TIME HANDS POSITION

* After setting or changing the battery, before setting the time, check if the dual time hour hand and dual time minute hand are at the "0" (12 o'clock) position.

* If either the dual time hour hand or the dual time minute hand is not at the "0" position, reset it / them following the procedure shown below :

1) Pull out the crown to second click (VD33) / first click (VD34)

2) Keep the buttons A & B pressed at the same time for more than 2 seconds, then release the buttons.

* Dual time minute hand moves and returns to where it was

3) Press button A or B to reset the dual time hands to "0" position.

* Button A : dual time hour hand and dual time minute hand move counter-clockwise

Button B : dual time hour hand and dual time minute hand move clockwise

* The dual time hour hand moves correspondingly with the dual time minute hand

* The dual time hour hand and dual time minute hand move quickly if the respective buttons are kept pressed.

4) Push the crown back in the normal position.

Note : The dual time minute hand rotates one revolution at every quarter (15 minutes). There is no problem as it is typical function of the movement.

LOCAL TIME SETTING

- 1) Pull out the crown to second click (VD33) / first click (VD34) when the second hand is at the 12 o'clock position.
- 2) Turn the crown to set the hour and minute hands. (make sure 24 hour hand is set correctly).
- 3) Push the crown back in the normal position in accordance with a time signal.

Note :

- * The 24 hour hand moves correspondingly with the hour hand.
- * The moment the date changes is midnight. When setting the hour hand, make sure that AM/PM is correctly set by using the 24 hour hand as an AM/PM indicator.

DUAL TIME SETTING

* When moving to a country or area in a different time zone, adjust the dual time hour hand to that country / area :

[Quick set the dual time]

- 1) Crown at normal position.
- 2) Adjust the time by pressing the button A or B.
Button A : - 1 hour / push
Button B : +1 hour / push

[Precise adjustment of the dual time]

- 1) Pull out the crown to second click (VD33) / first click (VD34) when the second hand is at the 12 o'clock position.
- 2) Adjust the time by pressing the button A or B.
Button A : -1 minute / push
Button B : +1 minute / push
- 3) Push the crown back in the normal position in accordance with a time signal.

Note :The dual time minute hand rotates one revolution at every quarter (15 minutes). There is no problem as it is typical function of the movement.

DATE SETTING (VD33 only)

* Before setting the date, be sure to set the time.

- 1) Pull out the crown to the first click.
- 2) Turn the crown clockwise until the desired date appears.
- 3) Push the crown back in the normal position.

Note :

* Do not set the date during any time between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside it, set the date and then reset the correct time.